








 





 

 



 



 






 














 

 
 
 
 
 
 

 
 
 




 


 







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Display		Shift + Info
	TV		TV/R
	PC		Smart
	Scart		AV
	Video/S-V		Media
	Component		Options
	Sound		Dual
	Exit		Exit
	APC		Guide
	ARC		Shift + Pre Ch
	Reset		Back
	Sleep		Sleep
	Teletext		Text
	Up		Up
	P+		Ch +
	P-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Enter		Ok
	Menu		Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡i]		Info
	1		1
	[+]		Shift + Options
	2		2
	[≡x]		Shift + TV/R





Original	Replacement	Original	Replacement
	3		3
	[≡?]		List
	4		4
	[◆]		Shift + 3D
	5		5
	Position		Subt
	6		6
	Size		Format
	7		7
	[O]		Shift + Subt
	8		8
	PIP Source		<<
	9		9
	PIP Source Up		>>
	0		0
	On/Off		3D
	+100		Shift + Guide

Original	Replacement	Original	Replacement
	RTN		Pre Ch

