


 








 


 


 

 

 


 
 
 



 



 


 



 
 


 
 


 
 


 


 

 


 







Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	[≡i]/Info		Info		Down		Down
	Mute		Mute		Right		Right
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Index		Media
	4		4		List		List
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		♥		Pre Ch
	0		0		Sleep		Sleep
	[≡?]/Source		AV		EPG		Guide
	(O/I/II/Audio		Dual		Recall		Back
	Menu		Menu		Red		Red
	Exit		Exit		<<		<<





Original	Replacement	Original	Replacement
			
Green	B Green		
			
Yellow	C Yellow		
			
Left Arrow	Left Arrow		
			
Blue	D Blue		
			
[=]	Text		
			
Play	Play		
			
Pause	Pause		
			
Stop/Still	Stop		
			
[=+]	Format		
			
Radio	TV/R		
			
[=◆]/[+]	3D		
			
[=x]	Options		
			
[=O]/Subtitle	Subt		
			
DMP	Smart		
			
Rec	Rec		

