




















 


 








Original	Replacement	Original	Replacement
	Power		Mute
	Back		Mute / Dimmer
	⚙️		Down
	Home		Info / Angle
	Browser		I<< / Preset-
	Up		I>> / Preset+
	Play/Pause		FN
	<<		Caps Lock
	>>		Movie
	Open/Close		Photo
	Search		Music
	Left		Shift
	OK		
	Right		
	Stop		
	Vol-		
	Vol+		

