



Original	Replacement
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Shift + Guide / EPG / -/-
Recall	Back / Return
Vol+	Vol+
I/II/Audio	Audio / Lang I/II
Auto	Smart / List

Original	Replacement
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
Up	Up
Left	Left
OK/Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Size	Zoom / Size
Play/Pause / Size	Play / Slow





Original		Replacement		Original	Replacement
	Play/Pause / Size		Pause / Step / Freeze		
	Stop/Hold		Stop / Hold		
	Text		Text / Goto		
	Subtitle		Subtitle / EQ		
	<</Index		<< / Tune-		
	>>/Reveal		>> / Tune+		
	I<</Subpage		I<< / Preset-		
	>>I/FAV		>>I / Preset+		
	>>I/FAV		Fav / Marker / PC		
	Media	+	Shift + Display / Media		
	Rec		Rec / Rec Mode		
	EPG		Guide / EPG / -/--		
	Tv/Radio		TV/Radio /		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		

