

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 



Original	Replacement
Open/Close	Eject / Surround
Power	Power
Tv/VCR	AV / Input / RDS
VCR	Shift + 4
DVD	Shift + 2
Clock Counter	Info / Angle
Program	TV/Radio /
One Touch	Green / APP / Repeat
Instant Skip	Text / Goto
Setup/VCR	Setup / OPT /
Zoom	Zoom / Size
I> Slow	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
CH+	CH+ / Page+
DVD Menu	Menu / Home
Left/Set-	Left

Original	Replacement
Enter	OK
Right/Set+	Right
Clear/Cancel	Exit / Cancel / Clear
CH-	CH- / Page-
Down	Down
Return	Back / Return
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
I<< Skip/Index-	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
Skip	>>I / Preset+
Rec/OTR	Rec / Rec Mode
Timer Rec	Sleep / Timer
Play	Red / Netflix / Search
A-B RPT	Yellow / YouTube / Repeat





	Original	Replacement	Original	Replacement
	1	 1		
	2	 2		
	3	 3		
	Display/Call	 Display / Media		
	4	 4		
	5	 5		
	6	 6		
	Jump/Zero Return	 Guide / EPG / -/-		
	7	 7		
	8	 8		
	9	 9		
	0/AUX	 0		
	Camera/Angle/Counter Reset	 Picture / Format		
	[...]/Subtitle/ATR	 Subtitle / EQ		
	0)/Audio/Audio Select	 Audio / Lang I/II		
	Marker	 Fav / Marker / PC		

