














 

 





 

 





 








Original	Replacement	Original	Replacement
Power	Power	1	1
Source	AV	2	2
P+	Ch +	3	3
P-	Ch -	4	4
Vol+	Vol +	5	5
Vol-	Vol -	6	6
I-II/Audio	Dual	7	7
Mute	Mute	8	8
OK	Ok	9	9
Up	Up	0/10	0
Down	Down	List/+10	List
Right	Right	Back/Program	Back
Left	Left	Tv/Radio	TV/R
Text	Text	FAV	Pre Ch
Sleep	Sleep	EPG	Guide
Tv Menu	Menu	Setup	Options
Exit	Exit	DVD Menu	D. Menu





Original	Replacement	Original	Replacement
 Repeat	 Shift + Text	 >>	 >>
 S.Mode	 Shift + Dual	 <<	 <<
 P.Mode	 Format	 <<	 <<
 Info	 Info	 >>	 >>
 Zoom/Size	 Shift + Eject	 Angle	 Shift + Options
 Subtitle	 Subt	 Goto	 Shift + Back
 D.Dis/Reveal	 Smart	 Step	 Shift + Subt
 Slow/Cancel	 3D		
 A-B/Index	 Media		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Play	 Play		
 Stop/Mix	 Stop		
 Open/Close/Subp	 Eject		
 Pause/Hold	 Pause		

