









 
 


 
 


 

 
 
 


 
 

 
 





 

















 





Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	1		1		OK		Ok
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		[...]		Subt
	7		7		:>		Format
	8		8		T-C		TV/R
	9		9		Audio		Dual
	0		0		Zoom		Eject
	DVD Menu		D. Menu		Repeat		Text
	OSD Menu		Menu		A-B Repeat		Options
	Return		Back		Shuffle		AV
	Up		Up		Play		Play
	Down		Down		Stop		Stop
	Right		Right		Pause		Pause





	Original	Replacement		Original	Replacement
	>>	 >>			
	<<	 <<			
	>	 >			
	<	 <			

