
 









Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 CBL/SAT	 1	 Eco	 3D
 DVD	 2	 Info	 Info
 Blu-ray	 3	 Option	 Options
 Game	 4	 Back	 Back
 AUX	 5	 Setup	 Menu
 Media Player	 6	 Enter	 Ok
 USB	 7	 Up	 Up
 TV Audio	 8	 Down	 Down
 Tuner	 9	 Right	 Right
 Bluetooth	 Guide	 Left	 Left
 Internet Radio	 0	 Play	 Play
 Mute	 Pre Ch	 Pause	 Pause
 CH/Page+	 Mute	 I<</Tune-	 I<<
 CH/Page-	 Ch +	 >>I/Tune+	 >>I
	 Ch -	 Green/Movie	 Green


 




 





Original	Replacement	Original	Replacement
Red/Music	Red		
Blue/Game	Blue		
Yellow/Pure	Yellow		
Quick Select 1	D. Menu		
Quick Select 2	Text		
Quick Select 3	Eject		
Quick Select 4	AV		





Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol -
 Sleep	 Sleep	 Mute	 Mute
 CBL/SAT	 1	 Back	 Back
 DVD	 2	 Enter	 Ok
 Blu-ray	 3	 Up	 Up
 Game	 4	 Down	 Down
 AUX	 5	 Left	 Left
 Media Player	 6	 Right	 Right
 USB	 7	 Play	 Play
 TV Audio	 8	 Pause	 Pause
 Tuner	 9	 I<</Tune-	 I<<
 Bluetooth	 Guide	 >>I/Tune+	 >>I
 Internet Radio	 0	 Quick Select 1	 D. Menu
 CH/Page+	 Pre Ch	 Quick Select 4	 AV
 CH/Page-	 Ch +	 Quick Select 3	 Eject
 Vol+	 Ch -	 Quick Select 2	 Text
	 Vol +		

