














 

 




 

 





 

 



 




 



 
 







 









Original	Replacement	Original	Replacement
	Power		Power
	TV/R		TV/Radio /
	Source		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	0		0
	-/--		Shift + Guide / EPG / -/--
	Menu		Menu / Home
	P+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	P-		CH- / Page-
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	i		Info / Angle
	Audio		Audio / Lang I/II
	Sub		Subtitle / EQ
	Guide		Guide / EPG / -/--
	TXT		Text / Goto
	↔		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	F1		Shift + 1















 

 





 
 





 

 



 







 

 
 


 

 





 









Original		Replacement		Original	Replacement
	F2	+	Shift + 2		
	F3	+	Shift + 3		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		





Original	Replacement	Original	Replacement
	Power		Power
	Tv/R		TV/Radio /
	Input		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	0		0
	-/--		Shift + Guide / EPG / -/--
	Menu		Menu / Home
	P+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	P-		CH- / Page-
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	i		Info / Angle
	Audio		Audio / Lang I/II
	Sub		Subtitle / EQ
	Guide		Guide / EPG / -/--
	TXT		Text / Goto
	↔		Fav / Marker / PC
	Pause		Pause / Step / Freeze
	F1		Shift + 1



