 

 



 

 



 

 























Original	Replacement
 Standby	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Aspect	 Shift + Picture / Format

Original	Replacement
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC





Original		Replacement	
	FAV-	 + 	Shift + CH- /
	FAV+	 + 	Shift + CH+ /
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	Hold	 + 	Shift + Stop /
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	Reveal		Setup / OPT /
	Subpage		Eject / Surround
	Media	 + 	Shift + Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<<		<<< / Tune-
	>>>		>>> / Tune+
	Rec		Rec / Rec Mode

Original		Replacement	
	Stop		Stop / Hold
	Fast Forward <<<		Fast Forward <<< / Preset-
	Fast Reverse >>>		Fast Reverse >>> / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

