



Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	V-		Vol-
	World/Internet		Smart / List
	P-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Music/Camera		Display / Media
	TV Guide		Guide / EPG / -/-
	*/O		Shift + 1
	*/Q		Shift + 2





Original	Replacement
[≡]/Text	GOTO TEXT Text / Goto
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
LANG.	LANG I/II AUDIO Audio / Lang I/II
[≡]..	TITLE SOUND Sound / Title
[-O-]	OPT-TOOLS SETUP Setup / OPT /
<<	TUNE- << / Tune-
Pause	STEP-FREEZE Pause / Step / Freeze
>>	TUNE+ >> / Tune+
Rec	REC MODE ● Rec / Rec Mode
Play	SLOW ▶ Play / Slow
Stop	HOLD ■ Stop / Hold

Original	Replacement

