



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 APP	 Shift + Green / APP /
 APP	 Display / Media
 0	 0
 Back	 Back / Return
 L-	 I<< / Preset-
 L+	 >>I / Preset+

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 CH+	 CH+ / Page+
 Down	 Down
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 Info	 Info / Angle
 List	 Smart / List
 EPG	 Guide / EPG / -/-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
	Blue Prime Video RANDOM		Blue / Prime Video / Random
	Audio LANG I/II AUDIO		Audio / Lang I/II
	Subt EQ SUBTITLE		Subtitle / EQ
	Text GOTO TEXT		Text / Goto
	Tv/Rad. PROGRAM TV/RADIO		TV/Radio /
	OPT OPT-TOOLS SETUP		Setup / OPT /
	Still STEP-FREEZE II		Pause / Step / Freeze
	Tv/AV RDS AV INPUT		AV / Input / RDS

Original	Replacement

