

 









 




 



 

 






Original	Replacement
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV / Input	 AV
 << Scan	 <<
 Scan >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I

Original	Replacement
 Pause / Step	 Pause
 Play	 Play
 Stop	 Stop
 Home	 Smart
 Menu / List	 Menu
 List	 List
 Up	 Up
 PR / CH+	 Ch +
 PR / CH-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Display	 Info
 Return	 Back
 O))) / Audio	 Dual
 [...] / Subtitle	 Subt





Original	Replacement
ZOOM Zoom	SHIFT + ZOOM Shift + Eject
SETUP Setup	SETTINGS OPT Options
REC Rec	REC MODE Rec
REC MODE Rec Mode	SHIFT + REC MODE Shift + Rec
THUMBNAI Thumbnail	PICTURE FORMAT Format
CHP.ADD CHP.ADD	REPEAT TEXT Text
PLAY MODE Play Mode	SHIFT + PLAY MODE Shift + Play
CLEAR Clear	CLEAR EXIT Exit
TITLE Title	GUIDE Guide
TV/DVD TV / DVD	SEARCH TV/R TV/R
POWER TV Power TV	SHIFT + POWER Shift + Power
PR / CH+ TV PR / CH+ TV	SHIFT + CH+ Shift + Ch +
PR / CH- TV PR / CH- TV	SHIFT + CH- Shift + Ch -
VOL+ TV Vol+ TV	VOL+ Vol +
VOL- TV Vol- TV	VOL- Vol -
AV / Input TV AV / Input TV	SHIFT + AV Shift + AV

Original	Replacement

