 

 

 

 

 

 

 



 

 

 

 

 

 

 

 
 
 





Original	Replacement
 Power	 Power
 PowerTv	 Shift + Power
 Eject	 Eject / Surround
 TTX/MIX	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DiscMenu	 D.Menu / Top
 0	 0
 TitleMenu/POPUP	 Sound / Title
 I<<	 I<< / Preset-

Original	Replacement
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Tv Vol+	 Vol+
 Tv Mute	 Mute / Dimmer
 Prog+	 CH+ / Page+
 Tv Vol-	 Vol-
 Tv Source	 AV / Input / RDS
 Prog-	 CH- / Page-
 CH List	 Shift + Smart / List
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up





Original	Replacement	Original	Replacement
Power Tv	Power	Play	Play / Slow
TTX/MIX	Text / Goto	Pause	Pause / Step / Freeze
1	1	Vol+	Vol+
2	2	Mute	Mute / Dimmer
3	3	Prog+	CH+ / Page+
4	4	Vol-	Vol-
5	5	Source	AV / Input / RDS
6	6	Prog-	CH- / Page-
7	7	CH List	Shift + Smart / List
8	8	Home	Menu / Home
9	9	Guide	Guide / EPG / -/-
0	0	Tools	Setup / OPT /
I<<	I<< / Preset-	Up	Up
>>I	>>I / Preset+	Info	Info / Angle
<<	<< / Tune-	Left	Left
>>	>> / Tune+	Enter	OK
Stop	Stop / Hold	Right	Right



