 








Original	Replacement	Original	Replacement
 Tuner	 Shift + 6	 9	 9
 Sleep	 Sleep / Timer	 Tone	 Shift + Audio / Lang I/II
 Power Receiver	 Power	 +10	 Guide / EPG / -/-
 Video	 Shift + 4	 0	 0
 DVD	 Shift + 2	 Dimmer	 Shift + Mute / Dimmer
 AUX	 Shift + 7	 Sound	 Sound / Title
 Game/F.AUX	 Smart / List	 Listen Mode	 Display / Media
 1	 1	 Active EQ	 Shift + Display / Media
 2	 2	 Multi Control	 Down
 3	 3	 Multi Control Up	 Up
 Input Mode	 AV / Input / RDS	 Vol+	 Vol+
 4	 4	 Vol-	 Vol-
 5	 5	 Play/Pause/Ban	 Play / Slow
 6	 6	 Stop/Auto/Mono	 Stop / Hold
 Setup	 Setup / OPT /	 Mute	 Mute / Dimmer
 7	 7	 I<< P.Call	 I<< / Preset-
 8	 8	 P.Call >>I	 >>I / Preset+

















 







 



























 









 









Original	Replacement
 << Tuning	 << / Tune-
 Tuning >>	 >> / Tune+
 Bass Boost	 Shift + Sound / Title
 Loudness	 Audio / Lang I/II
 RDS Disp./Disc	 Shift + AV / Input / RDS
 PTY/Disc Skip	 D.Menu / Top

Original	Replacement

 






Original	Replacement	Original	Replacement
 Power DVD	 Power	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Return	 Back / Return
 5	 5	 On Screen	 Display / Media
 6	 6	 Pause	 Pause / Step / Freeze
 Setup	 Setup / OPT /	 Play/Pause	 Play / Slow
 7	 7	 Stop	 Stop / Hold
 8	 8	 I<<	 I<< / Preset-
 9	 9	 >>I	 >>I / Preset+
 +10	 Guide / EPG / -/--	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 Dimmer	 Mute / Dimmer	 RDS Disp./Disc	 AV / Input / RDS
 Top Menu	 D.Menu / Top	 PTY Disc Skip	 Shift + D.Menu / Top Menu
 Up	 Up	 Audio	 Audio / Lang I/II
 Menu	 Menu / Home	 Subtitle	 Subtitle / EQ





Original	Replacement	Original	Replacement
	Angle		Info / Angle
	Repeat		Green / APP / Repeat

