





















 






















 
 
 





 
 












Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Top Menu	 D.Menu / Top
 Subtitle	 Shift + Subtitle / EQ
 Display	 Display / Media
 Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 Disc	 Smart / List
 4	 4
 5	 5
 6	 6
 >10/-/-	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Pro Logic	 Sound / Title
 CH Select	 TV/Radio /
 Test	 Text / Goto
 Super SRND	 Eject / Surround
 Menu	 Menu / Home
 EQ	 Subtitle / EQ
 Up	 Up
 Shift Up	 Shift + Up
 Return	 Back / Return
 Super Sound EQ	 CH+ / Page+
 Left	 Left
 Shift Left	 Shift + Left
 Enter	 OK
 Right	 Right
 Shift Right	 Shift + Right
 S.3D AI EQ	 Zoom / Size





Original	Replacement
	 Fav / Marker / PC
	 Down
	 +  Shift + Down
	 Info / Angle
	 AV / Input / RDS
	 Red / Netflix / Search
	 +  Shift + 7
	 +  Shift + 4
	 +  Shift + 5
	 Green / APP / Repeat
	 +  Shift + 2
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 +  Shift + 6
	 +  Shift + Play /
	 Exit / Cancel / Clear
	 Pause / Step / Freeze

Original	Replacement
	 Stop / Hold
	 Play / Slow
	 Audio / Lang I/II
	 Picture / Format
	 CH- / Page-
	 << / Tune-
	 >> / Tune+
	 Mute / Dimmer
	 I<< / Preset-
	 >>I / Preset+
	 Vol-
	 Vol+

