



 



 



 



 



 



 



 



 

 





 







 



















 

 

 

 

 

 

 





 





Original	Replacement	Original	Replacement
 Power	 Power	 I-II	 Audio / Lang I/II
 Input1	 Shift + 1	 Split Screen	 Smart / List
 Input2	 Shift + 2	 Screen Swap	 Display / Media
 Input3	 Shift + 3	 PIP Swap	 D.Menu / Top
 Input4	 Shift + 4	 P+	 CH+ / Page+
 1	 1	 Vol+	 Vol+
 2	 2	 P-	 CH- / Page-
 3	 3	 Mute	 Mute / Dimmer
 4	 4	 Vol-	 Vol-
 5	 5	 Red	 Red / Netflix / Search
 6	 6	 Green	 Green / APP / Repeat
 7	 7	 Yellow	 Yellow / YouTube / Repeat
 8	 8	 Blue	 Blue / Prime Video / Random
 9	 9	 [...]	 Subtitle / EQ
 PC	 Fav / Marker / PC	 [≡?]	 AV / Input / RDS
 0	 0	 [≡i]	 Info / Angle
 [i+]/Timer	 Sleep / Timer	 [≡]/Text	 Text / Goto





Original	Replacement	Original	Replacement
 Return	 Back / Return		
 Up	 Up		
 Home Menu	 Menu / Home		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Down	 Down		
 EPG	 Guide / EPG / -/--		
 [↔]/[≡+]	 Setup / OPT /		
 [<>]/[≡◇]	 Picture / Format		

