





 


















 



Original	Replacement
INFO [i+]/REVEAL [?]	Info / Angle
[+]	Zoom / Size
POWER	Power
<<	<< / Tune-
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
>>	>> / Tune+
SYNC MENU	D.Menu / Top
STOP	Stop / Hold
THEATRE	Picture / Format
DIGITAL	Display / Media
ANALOG	Smart / List
SUBTITLE [...]	Subtitle / EQ
AUDIO	Audio / Lang I/II
GUIDE	Guide / EPG / -/--
^	Up
Source	AV / Input / RDS

Original	Replacement
<	Left
OK	OK
>	Right
RETURN	Back / Return
V	Down
Tools	Setup / OPT /
Menu	Menu / Home
RED	Red / Netflix / Search
GREEN	Green / APP / Repeat
YELLOW	Yellow / YouTube / Repeat
BLUE	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6





	Original	Replacement	Original	Replacement
	7	 7		
	8	 8		
	9	 9		
	TEXT [=]	 Text / Goto		
	0	 0		
	FAV	 +  Shift + Fav / Marker / PC		
	VOL+	 Vol+		
	CH+	 CH+ / Page+		
	VOL-	 Vol-		
	CH-	 CH- / Page-		
	MUTE	 Mute / Dimmer		
	RECALL	 Fav / Marker / PC		

