






 

 

 





 



 

 

 
 
 

 







 



 

 



 

 



 



 



 



 






Original	Replacement	Original	Replacement
 Power	 Power	 TXT/MIX	 Text
 Sleep	 Sleep	 Play	 Play
 Mute	 Mute	 Pause	 Pause
 Mode	 Media	 Stop	 Stop
 1	 1	 Rec	 Rec
 2	 2	 >>/Index	 >>
 3	 3	 <</Hold	 <<
 4	 4	 I<<	 I<<
 5	 5	 >>I	 >>I
 6	 6	 Cancel	 Exit
 7	 7	 Menu	 Menu
 8	 8	 DTV/Radio	 TV/R
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Shift + Guide	 Up	 Up
 Back	 Back	 Down	 Down
 Nicam/A2	 Dual	 Right	 Right






 
 






 

 
 


 

 


Original		Replacement		Original		Replacement	
	Left		Left		FAV-		Shift + Ch -
	Enter		Ok				
	CH+		Ch +				
	CH-		Ch -				
	FAV		Pre Ch				
	EPG		Guide				
	Info		Info				
	List		List				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Size		Format				
	Reveal		3D				
	Subtitle		Subt				
	Subpage		AV				
	FAV+		Shift + Ch +				



 




 



 



Original	Replacement	Replacement
Power		Power
Mute		Mute
[I]/Menu		Menu
Exit		Exit
Source		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Subtitle		Subt
Text		Text

Original	Replacement	Replacement
Vol+		Vol +
Vol-		Vol -
CH+		Ch +
CH-		Ch -
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Recall		Back
Info		Info
EPG		Guide
Freeze		Options
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Original	Replacement	Original	Replacement
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

