





































 







 











































 















Original	Replacement	Original	Replacement
 Power	 Power	 Edit	 Fav / Marker / PC
 Setup	 Setup / OPT /	 Copy	 Guide / EPG / -/-
 Disk	 Yellow / YouTube / Repeat	 Dir	 Text / Goto
 Disk	 Shift + 7	 0	 0
 1	 1	 Movie	 Smart / List
 2	 2	 Music	 Display / Media
 3	 3	 Photo	 Shift + Display / Media
 HDMI/AV	 AV / Input / RDS	 Vol-	 Vol-
 HDMI/AV	 Blue / Prime Video / Random	 Vol+	 Vol+
 HDMI/AV	 Shift + 0	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 Mute	 Mute / Dimmer	 Down	 Down
 7	 7	 Repeat	 Green / APP / Repeat
 8	 8	 Pause	 Pause / Step / Freeze
 9	 9	 Step	 Shift + Pause / Step / Freeze

 Edit	 Fav / Marker / PC
 Copy	 Guide / EPG / -/-
 Dir	 Text / Goto
 0	 0
 Movie	 Smart / List
 Music	 Display / Media
 Photo	 Shift + Display / Media
 Vol-	 Vol-
 Vol+	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Repeat	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze
 Step	 Shift + Pause / Step / Freeze





	Original	Replacement	Original	Replacement
	 <</Rev	 << / Tune-		
	 Play	 Play / Slow		
	 I<</PG Up	 I<< / Preset-		
	 I<</PG Up	 CH+ / Page+		
	 >>/FF	 >> / Tune+		
	 Stop	 Stop / Hold		
	 >>I/PG Dn	 >>I / Preset+		
	 >>I/PG Dn	 CH- / Page-		
	 Audio	 Audio / Lang I/II		
	 Sub-T	 Subtitle / EQ		
	 PSM	 D.Menu / Top		
	 Info	 Info / Angle		
	 Home	 Menu / Home		
	 Exit	 Exit / Cancel / Clear		
	 S.Show	 Picture / Format		
	 DVD	 Red / Netflix / Search		
	 DVD	 +  Shift + 2		

