











 




















 




Original	Replacement
 Speakers TV Audio Bravia Sync	 Shift + Sound / Title
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ♥	 Fav / Marker / PC
 [≡]	 Text / Goto
 0	 0
 Enter	 Guide / EPG / -/--
 Red	 Red / Netflix / Search

Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 I<</Preset-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I/Preset+	 >>I / Preset+





 











 
 

 







 

 



 


















 
 
 


 
 






Original	Replacement	Original	Replacement
<</Tuning-	<< / Tune-		
Play	Play / Slow		
>>/Tuning+	>> / Tune+		
[...]	Subtitle / EQ		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
Mute	Mute / Dimmer		
Vol+	Vol+		
Prog+	CH+ / Page+		
Display	Display / Media		
O)))	Audio / Lang I/II		
Vol-	Vol-		
Prog-	CH- / Page-		
Sleep	Sleep / Timer		





Original	Replacement	Original	Replacement
 Eject	 Eject / Surround	 Blue	 Blue / Prime Video / Random
 Power	 Power	 Top Menu	 D.Menu / Top
 1	 1	 Up	 Up
 2	 2	 Pop Up Menu	 Smart / List
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Return	 Back / Return
 7	 7	 Down	 Down
 8	 8	 Options/Tools	 Setup / OPT /
 9	 9	 Function	 Info / Angle
 ♥	 Fav / Marker / PC	 Home/Menu	 Menu / Home
 0	 0	 Sound Mode	 Sound / Title
 Enter	 Guide / EPG / -/-	 I<</Preset-	 I<< / Preset-
 Red	 Red / Netflix / Search	 ←	 Shift + Left
 Green	 Green / APP / Repeat	 →	 Shift + Right
 Yellow	 Yellow / YouTube / Repeat	 >>I/Preset+	 >>I / Preset+







Original	Replacement
Speakers TV Audio Bravia Sync	Sound / Title
Power AV Bravia Sync	Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
♥ Fav / Marker / PC	Fav / Marker / PC
[≡] Text / Goto	Text / Goto
0	0
Red	Red / Netflix / Search
Green	Green / APP / Repeat

Original	Replacement
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Home/Menu	Menu / Home
[...]	Subtitle / EQ
Mute	Mute / Dimmer
Vol+	Vol+
Prog+	CH+ / Page+
Display	Display / Media
Vol-	Vol-
Prog-	CH- / Page-



