



















Original	Replacement	Original	Replacement
Power	Power	6	6
Sleep	Sleep / Timer	+10	Guide / EPG / -/-
Display Mode RDS	Display / Media	Phono	Shift + 7
Select PTY	Yellow / YouTube / Repeat	7	7
Search PTY	Red / Netflix / Search	8	8
VCR	Shift + 4	9	9
CD	Shift + 3	0	0
Tuner / Band	Shift + 6	Play CD	Play / Slow
Auto / Mono	Audio / Lang I/II	Pause CD	Pause / Step / Freeze
VDP	Shift + 2	Stop CD	Stop / Hold
1	1	I<< CD	I<< / Preset-
2	2	>>I CD	>>I / Preset+
3	3	Open/Close CD	Eject / Surround
Disc	Fav / Marker / PC	Repeat CD	Green / APP / Repeat
EXT	Shift + 1	Program CD	TV/Radio /
4	4	Cancel CD	Exit / Cancel / Clear
5	5	< Tape	Left





Original	Replacement
	 OK
	 Right
	 Down
	 Up
	 Back / Return
	 Smart / List
	 Info / Angle
	 Sound / Title
	 Zoom / Size
	 Shift + Left
	 Shift + Right
	 Text / Goto
	 Shift + Down
	 Shift + Up
	 CH- / Page-
	 CH+ / Page+
	 Mute / Dimmer

Original	Replacement
	 Vol-
	 Vol+

