












 


 



 








Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 TV / VCR	 TV/Radio /
 TV / View	 Smart / List
 2	 2
 4	 4
 1 / Tracking -	 1
 5	 5
 3 / Tracking +	 3
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 P.Scan	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Edit	 Fav / Marker / PC
 Display	 Display / Media
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-










 





Original	Replacement
	 >> / Tune+
	 Stop / Hold
	 Rec / Rec Mode
	 AV / Input / RDS
	 Subtitle / EQ
	 <  / Slow -
	 Slow + /  > Vol+
	 Copy Guide / EPG / -/--
	 Angle Info / Angle
	 Rec Speed Shift + Rec / Rec Mode
	 Zoom Zoom / Size
	 Repeat Green / APP / Repeat
	 A-B Yellow / YouTube / Repeat
	 Search Red / Netflix / Search
	 Audio Audio / Lang I/II
	 Title Sound / Title
	 Timer Sleep / Timer

Original	Replacement





Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 TV / VCR	 TV/Radio /
 TV / View	 Smart / List
 2	 2
 4	 4
 1 / Tracking -	 1
 5	 5
 3 / Tracking +	 3
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 P.Scan	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Edit	 Fav / Marker / PC
 Display	 Display / Media
 I<<	 I<< / Preset-
 I>>	 I>> / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-





Original		Replacement	
	>>		>> / Tune+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Input		AV / Input / RDS
	Subtitle		Subtitle / EQ
	<I / Slow -		Vol-
	Slow + / I>		Vol+
	Copy		Guide / EPG / -/-
	Angle		Info / Angle
	Rec Speed		Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Search		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Timer		Sleep / Timer

Original		Replacement	

