











 

 














Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 TV / VCR	 TV/Radio /
 TV / View	 Smart / List
 2	 2
 4	 4
 1 / Tracking -	 1
 5	 5
 3 / Tracking +	 3
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 P.Scan	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Edit	 Fav / Marker / PC
 Display	 Display / Media
 I<<	 I<< / Preset-
 I>>	 I>> / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-




















 
 









Original	Replacement
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Input	 AV / Input / RDS
 Subtitle	 Subtitle / EQ
 < / Slow -	 Vol-
 Slow + / >	 Vol+
 Copy	 Guide / EPG / -/--
 Angle	 Info / Angle
 Rec Speed	 Shift + Rec / Rec Mode
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Search	 Red / Netflix / Search
 Audio	 Audio / Lang I/II
 Title	 Sound / Title
 Timer	 Sleep / Timer

Original	Replacement





Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 TV / VCR	 TV/Radio /
 TV / View	 Smart / List
 2	 2
 4	 4
 1 / Tracking -	 1
 5	 5
 3 / Tracking +	 3
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 P.Scan	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Edit	 Fav / Marker / PC
 Display	 Display / Media
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-





	Original	Replacement	Original	Replacement
				
>>	>>	>> / Tune+		
				
Stop	Stop	Stop / Hold		
				
Rec	Rec	Rec / Rec Mode		
				
Input	Input	AV / Input / RDS		
				
Subtitle	Subtitle	Subtitle / EQ		
				
< / Slow -	< / Slow -	Vol-		
				
Slow + / >	Slow + / >	Vol+		
				
Copy	Copy	Guide / EPG / -/--		
				
Angle	Angle	Info / Angle		
				
Rec Speed	Rec Speed	Shift + Rec / Rec Mode		
				
Zoom	Zoom	Zoom / Size		
				
Repeat	Repeat	Green / APP / Repeat		
				
A-B	A-B	Yellow / YouTube / Repeat		
				
Search	Search	Red / Netflix / Search		
				
Audio	Audio	Audio / Lang I/II		
				
Title	Title	Sound / Title		
				
Timer	Timer	Sleep / Timer		

