



| Original                  | Replacement                 |
|---------------------------|-----------------------------|
| Digital                   | Display / Media             |
| Yellow/Theater Modes/Info | Yellow / YouTube / Repeat   |
| Power                     | Power                       |
| Tv                        | Shift + 1                   |
| DVD                       | Shift + 2                   |
| Green/Stereo/[...]        | Green / APP / Repeat        |
| Blue/Delay/Title          | Blue / Prime Video / Random |
| Red/Center/Audio          | Red / Netflix / Search      |
| Up                        | Up                          |
| Violet/Level/Came         | Fav / Marker / PC           |
| Tape                      | Shift + 5                   |
| SAT/CAB                   | Shift + 0                   |
| Tuner                     | Shift + 6                   |
| Video/VCR                 | Shift + 4                   |
| Left/-                    | Left                        |
| OK                        | OK                          |
| Right/+                   | Right                       |

| Original | Replacement   |
|----------|---------------|
| PTY      | Text / Goto   |
| Down     | Down          |
| Menu/RDS | Menu / Home   |
| Vol+     | Vol+          |
| PR+/>>I  | CH+ / Page+   |
| Vol-     | Vol-          |
| PR-/I<<  | CH- / Page-   |
| Mute     | Mute / Dimmer |
| 1        | 1             |
| 2        | 2             |
| 3        | 3             |
| 4        | 4             |
| 5        | 5             |
| 6        | 6             |
| 7        | 7             |
| 8        | 8             |
| 9        | 9             |





 

 




 








 

 

 











 






| Original   | Replacement  | Original | Replacement |
|--|--|----------|-------------|
|  Memo / Clear |  Smart / List |          |             |
|  0            |  0            |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |





| Original  | Replacement   |
|---|---|
|  Digital                   |  Display / Media             |
|  Yellow/Theater Modes/Info |  Yellow / YouTube / Repeat   |
|  Power                     |  Power                       |
|  TV                        |  Shift + 1                   |
|  DVD                       |  Shift + 2                   |
|  Green/Stereo/[...]        |  Green / APP / Repeat        |
|  Blue/Delay/Title          |  Blue / Prime Video / Random |
|  Red/Center/Audio          |  Red / Netflix / Search      |
|  Up                        |  Up                          |
|  Violet/Level/Came         |  Fav / Marker / PC           |
|  Tape                     |  Shift + 5                  |
|  SAT/CAB                 |  Shift + 0                 |
|  Tuner                   |  Shift + 6                 |
|  Video/VCR               |  Shift + 4                 |
|  Left/-                  |  Left                      |
|  OK                      |  OK                        |
|  Right/+                 |  Right                     |

| Original   | Replacement   |
|--|---|
|  Down     |  Down          |
|  Menu/RDS |  Menu / Home   |
|  Vol+     |  Vol+          |
|  PR+ />>I |  >>I / Preset+ |
|  PR+ />>I |  CH+ / Page+   |
|  Vol-     |  Vol-          |
|  PR- /I<< |  I<< / Preset- |
|  PR- /I<< |  CH- / Page-   |
|  Mute     |  Mute / Dimmer |
|  1        |  1             |
|  2       |  2            |
|  3      |  3           |
|  4      |  4           |
|  5      |  5           |
|  6      |  6           |
|  7      |  7           |
|  8      |  8           |





|  | Original   | Replacement           |  | Original | Replacement |
|--|------------|-----------------------|--|----------|-------------|
|  | 9          | 9                     |  |          |             |
|  | Memo/Clear | Smart / List          |  |          |             |
|  | 0          | 0                     |  |          |             |
|  | <<         | << / Tune-            |  |          |             |
|  | Play       | Play / Slow           |  |          |             |
|  | >>         | >> / Tune+            |  |          |             |
|  | Rec        | Rec / Rec Mode        |  |          |             |
|  | Stop       | Stop / Hold           |  |          |             |
|  | Pause      | Pause / Step / Freeze |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |

|  | Original | Replacement |  | Original | Replacement |
|--|----------|-------------|--|----------|-------------|
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |
|  |          |             |  |          |             |





| Original                  | Replacement                 |
|---------------------------|-----------------------------|
| Digital                   | Display / Media             |
| Yellow/Theater Modes/Info | Yellow / YouTube / Repeat   |
| Power                     | Power                       |
| TV                        | Shift + 1                   |
| DVD                       | Shift + 2                   |
| Green/Stereo/[...]        | Green / APP / Repeat        |
| Blue/Delay/Title          | Blue / Prime Video / Random |
| Red/Center/Audio          | Red / Netflix / Search      |
| Up                        | Up                          |
| Violet/Level/Came         | Fav / Marker / PC           |
| Tape                      | Shift + 5                   |
| SAT/CAB                   | Shift + 0                   |
| Tuner                     | Shift + 6                   |
| Video/VCR                 | Shift + 4                   |
| Left/-                    | Left                        |
| OK                        | OK                          |
| Right/+                   | Right                       |

| Original | Replacement   |
|----------|---------------|
| PTY      | Text / Goto   |
| Down     | Down          |
| Menu/RDS | Menu / Home   |
| Vol+     | Vol+          |
| PR+ />>I | CH+ / Page+   |
| Vol-     | Vol-          |
| PR- /I<< | CH- / Page-   |
| Mute     | Mute / Dimmer |
| 1        | 1             |
| 2        | 2             |
| 3        | 3             |
| 4        | 4             |
| 5        | 5             |
| 6        | 6             |
| 7        | 7             |
| 8        | 8             |
| 9        | 9             |





 

 




 





 




 













 

 

 

 





 

 

 

 

 







 







| Original  |            | Replacement   |                       | Original | Replacement |
|---|------------|---|-----------------------|----------|-------------|
|  | Memo/Clear |  | Smart / List          |          |             |
|  | 0          |  | 0                     |          |             |
|  | <<         |  | << / Tune-            |          |             |
|  | Play       |  | Play / Slow           |          |             |
|  | >>         |  | >> / Tune+            |          |             |
|  | Rec        |  | Rec / Rec Mode        |          |             |
|  | Stop       |  | Stop / Hold           |          |             |
|  | Pause      |  | Pause / Step / Freeze |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |
|   |            |   |                       |          |             |





| Original  | Replacement   |
|---|---|
|  Digital                   |  Display / Media             |
|  Yellow/Theater Modes/Info |  Yellow / YouTube / Repeat   |
|  Power                     |  Power                       |
|  Tv                        |  Shift + 1                   |
|  DVD                       |  Shift + 2                   |
|  Green/Stereo/[...]        |  Green / APP / Repeat        |
|  Blue/Delay/Title          |  Blue / Prime Video / Random |
|  Red/Center/Audio          |  Audio / Lang I/II           |
|  Red/Center/Audio          |  Red / Netflix / Search      |
|  Up                        |  Up                          |
|  Violet/Camera/Le         |  Fav / Marker / PC          |
|  Tape                    |  Shift + 5                 |
|  SAT/CAB                 |  Shift + 0                 |
|  Tuner                   |  Shift + 6                 |
|  Video/VCR               |  Shift + 4                 |
|  Left/-                  |  Left                      |
|  OK                      |  OK                        |

| Original   | Replacement  |
|--|--|
|  Right/+  |  Right            |
|  PTY      |  Text / Goto      |
|  Down     |  Down             |
|  Menu/RDS |  Menu / Home      |
|  Menu/RDS |  AV / Input / RDS |
|  Vol+     |  Vol+             |
|  PR+ />>I |  CH+ / Page+      |
|  PR+ />>I |  >>I / Preset+    |
|  Vol-     |  Vol-             |
|  PR-/I<<  |  CH- / Page-      |
|  PR-/I<< |  I<< / Preset-   |
|  Mute   |  Mute / Dimmer  |
|  1      |  1              |
|  2      |  2              |
|  3      |  3              |
|  4      |  4              |
|  5      |  5              |





|  | Original   | Replacement           |  | Original | Replacement |
|--|------------|-----------------------|--|----------|-------------|
|  | 6          | 6                     |  |          |             |
|  | 7          | 7                     |  |          |             |
|  | 8          | 8                     |  |          |             |
|  | 9          | 9                     |  |          |             |
|  | Memo/Clear | Smart / List          |  |          |             |
|  | 0          | 0                     |  |          |             |
|  | <<         | << / Tune-            |  |          |             |
|  | Play       | Play / Slow           |  |          |             |
|  | >>         | >> / Tune+            |  |          |             |
|  | Rec        | Rec / Rec Mode        |  |          |             |
|  | Stop       | Stop / Hold           |  |          |             |
|  | Pause      | Pause / Step / Freeze |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |
|  |            |                       |  |          |             |

