
 



 
 

 
 

 
 
 
 
 
 
 
 
 

 



 

 
 

 

 


 











 
 




Original	Replacement	Original	Replacement
	Power		Power
	Right		Right
	Tv/Video		TV/R
	VCR		Guide
	DVD		Pre Ch
	Source		AV
	Options		Options
	USB		Smart
	Select		D. Menu
	Clear		Exit
	Disc		Media
	Setup		Menu
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Left		Left
	OK		Ok
	<</REW		<<
	>>/FFW		>>
	Play		Play
	Pause		Pause
	I</Prev		I<<
	>I/Next		>>I
	Rec		Rec
	Stop		Stop
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Dubbing/Direct		Text
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Subtitle		Subt				
	Audio		Dual				
	Rec Mode		Shift + Rec				
	Timer		Shift + AV				
	Edit		Format				
	Showview		3D				

