



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Del		Pre Ch
	Input Select		AV
	Select Drive		D. Menu
	Cast Vieta		Media
	Function Menu		Menu
	Direct Navigator		List
	Guide		Guide
	Return		Back
	Option		Options
	Exit		Exit
	i / Status		Info
	Pause / Pause Live Tv		Pause
	Stop		Stop
	Play/x1.3		Play
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Prog/Check		Sleep
	OK		Ok
	Up		Up
	Down		Down
	Right		Right





Original		Replacement		Original		Replacement	
	Left		Left		Vol + Tv		Vol +
	Red		Red		Vol - Tv		Vol -
	Green		Green		AV / Input Tv	 + 	Shift + AV
	Yellow		Yellow		CH + Tv	 + 	Shift + Ch +
	Blue		Blue		CH - Tv	 + 	Shift + Ch -
	Rec		Rec		Power Tv	 + 	Shift + Power
	Direct Tv Rec		TV/R		Manual Skip +60s	 + 	Shift + Pre Ch
	Rec Mode	 + 	Shift + Rec		Manual Skip -10s	 + 	Shift + Guide
	Ext Link		Smart				
	Audio		Dual				
	[≡♦] / STTL		Subt				
	[≡] / Text		Text				
	Display	 + 	Shift + Info				
	Chapter		Format				
	Time Slip		3D				
	CH/Page+		Ch +				
	CH/Page-		Ch -				

