



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Del		Pre Ch
	Input Select		AV
	Select Drive		D. Menu
	Cast Vieta		Media
	Function Menu		Menu
	Direct Navigator		List
	Guide		Guide
	Return		Back
	Option		Options
	Exit		Exit
	i / Status		Info
	Pause / Pause Live Tv		Pause
	Stop		Stop
	Play/x1.3		Play
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Prog/Check		Sleep
	OK		Ok
	Up		Up
	Down		Down
	Right		Right





Original	Replacement	Original	Replacement
 Left	 Left	 Vol + Tv	 Vol +
 Red	 Red	 Vol - Tv	 Vol -
 Green	 Green	 AV / Input Tv	 Shift + AV
 Yellow	 Yellow	 CH + Tv	 Shift + Ch +
 Blue	 Blue	 CH - Tv	 Shift + Ch -
 Rec	 Rec	 Power Tv	 Shift + Power
 Direct Tv Rec	 TV/R	 Manual Skip +60s	 Shift + Pre Ch
 Rec Mode	 Shift + Rec	 Manual Skip -10s	 Shift + Guide
 Ext Link	 Smart		
 Audio	 Dual		
 [≡◆] / STTL	 Subt		
 [≡] / Text	 Text		
 Display	 Shift + Info		
 Chapter	 Format		
 Time Slip	 3D		
 CH/Page+	 Ch +		
 CH/Page-	 Ch -		

