












Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *(Left)	 Shift + Left
 0	 0
 *(Right)	 Shift + Right
 []/Picture	 Picture / Format
 /Sound	 Sound / Title
 I-II	 Audio / Lang I/II

Original	Replacement
 Menu	 Menu / Home
 Up/PR+	 Up
 PR+	 CH+ / Page+
 List	 Smart / List
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 Down/PR-	 Down
 PR-	 CH- / Page-
 P<P	 Back / Return
 Tv/AV	 AV / Input / RDS
 Tv/PC	 TV/Radio /
 [<>]/ARC	 Shift + Picture / Format
 Red	 Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto
 [.=]/Mix	 Shift + Text / Text /
 [=◆]/Size	 Zoom / Size
 [=i]/Index	 Info / Angle
 [=x]/Update	 Rec / Rec Mode
 [=o]/Time	 Pause / Step / Freeze
 [=?]/Reveal	 Play / Slow
 [=+]/Hold	 Stop / Hold
 [■]/PIP	 Display / Media
 [:■]/Input	 Shift + AV / Input / RDS / RDS
 [/■]/Swap	 Shift + Back / Return / Return
 PIP PR+	 Shift + CH+ / CH+ /
 [-■]/Position	 Shift + Display / Media / Media
 [=.] / Mode	 Shift + Smart / List / List

Original	Replacement
 *(Down)	 Shift + Down / Down
 PIP PR-	 Shift + CH- / CH- /

