



| Original | Replacement | Original | Replacement |
|----------|--------------|----------|-----------------------------|
| | Eject | | Eject / Surround |
| | Power | | Power |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | P/N | | Blue / Prime Video / Random |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | Mute | | Mute / Dimmer |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Vol + | | Vol+ |
| | 0 | | 0 |
| | 10+ | | Guide / EPG / -/- |
| | GOTO | | Text / Goto |
| | Vol - | | Vol- |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | Step | | Pause / Step / Freeze |
| | Play / Pause | | Play / Slow |
| | Stop | | Stop / Hold |
| | Menu | | Menu / Home |
| | Up | | Up |
| | Setup | | Setup / OPT / |
| | Left | | Left |
| | Enter | | OK |
| | Right | | Right |
| | Title | | Sound / Title |
| | Down | | Down |
| | Display | | Display / Media |



