



| Original | Replacement |
|---|---|
|  Power |  Power |
|  Tv/Radio |  TV/Radio / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  FAV |  Fav / Marker / PC |
|  Text |  Text / Goto |
|  Hold |  Shift + Stop / |
|  TVG |  Guide / EPG / -/-- |
|  Subtitle |  Subtitle / EQ |
|  Size |  Zoom / Size |
|  Aspect |  Shift + Picture / Format |
|  Media |  Smart / List |
|  Subpage |  Eject / Surround |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |

| Original | Replacement |
|---|---|
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  I<< |  I<< / Preset- |
|  Sleep |  Sleep / Timer |
|  >>I/Index |  >>I / Preset+ |
|  Audio |  Audio / Lang I/II |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  OK |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |





| Original | | Replacement | |
|----------|---------|-------------|----------------------------|
| | Mute | | Mute / Dimmer |
| | Display | | Display / Media |
| | CH+ | | CH+ / Page+ |
| | CH- | | CH- / Page- |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | Source | | Shift + Guide / EPG / -/-- |
| | Recall | | Back / Return |
| | Source | | AV / Input / RDS |

| Original | | Replacement | |
|----------|--------|-------------|------------------|
| | P.Mode | | Picture / Format |
| | S.Mode | | Sound / Title |

