
 



 

















 

 

 

 

 



 


 

 


















Original		Replacement		Original		Replacement	
	Power		Power		0		0
	TV / Radio		TV/Radio /		Recall		Back / Return
	P.Mode		Picture / Format		Vol+		Vol+
	S.Mode		Sound / Title		Mute		Mute / Dimmer
	Sleep		Sleep / Timer		CH +		CH+ / Page+
	Aspect		Shift + Picture / Format		Vol -		Vol-
	1		1		Source		AV / Input / RDS
	2		2		CH -		CH- / Page-
	3		3		Nicam / Angle		Info / Angle
	4		4		Nicam / Angle		Shift + Audio / Lang I/II
	5		5		Menu		Menu / Home
	6		6		Subtitle		Subtitle / EQ
	7		7		i / Display		Display / Media
	8		8		Exit		Exit / Cancel / Clear
	9		9		Return		Shift + Back / Return
	CH List / 10+		Shift + Guide / EPG / -/-		Up		Up
	CH List / 10+		Smart / List		Left		Left





Original	Replacement
OK	OK
Right	Right
Record / Eject	Rec / Rec Mode
Record / Eject	Eject / Surround
Down	Down
EPG / DVD	Setup / OPT /
EPG / DVD	Guide / EPG / -/--
Red / Goto DVD	Red / Netflix / Search
Red / Goto DVD	Shift + Text /
Green / Slow DVD	Green / APP / Repeat
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP /
Blue / A-B DVD	Blue / Prime Video / Random
Blue / A-B DVD	Shift + Yellow / YouTube /
Play	Play / Slow
Pause / Timeshift	Pause / Step / Freeze
Stop / FAV	Fav / Marker / PC

Original	Replacement
Stop / FAV	Stop / Hold
[≡i] / Audio / Index	Audio / Lang I/II
I<<	I<< / Preset-
[ /≡] / Text	Text / Goto
<< / Cancel	<< / Tune-
[≡x] / Cancel	Shift + Exit / Cancel / Clear
[≡♦] / Freeze	Shift + Pause / Step /
Size / DVD Title	Zoom / Size
Size / DVD Title	Shift + Sound / Title
>>	>>  / Preset+
[≡+] / Hold	Shift + Stop /
>>	>> / Tune+
[≡?] / Reveal	Shift + OK
[≡o] / Subpage / DVD Menu	D.Menu / Top

