



Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0		0
	AV		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Tv/DTV		Setup / OPT /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	[≡]/Text		Text / Goto
	Down		Down
	Back		Back / Return
	P+		CH+ / Page+
	Vol+		Vol+
	P-		CH- / Page-
	Vol-		Vol-
	[^]/[+]		Smart / List
	<<		<< / Tune-
	Tv/Radio/[?]		TV/Radio /




 
 

 

 


 


 

 





 









	Original	Replacement	Original	Replacement
	Play	Play / Slow		
	Guide/[♦]	Guide / EPG / --		
	>>	>> / Tune+		
	[^]/Timer	Display / Media		
	Rec/Top Menu	D.Menu / Top		
	Rec/Top Menu	Rec / Rec Mode		
	I-II/[X]	Audio / Lang I/II		
	Stop	Stop / Hold		
	[...]/[≡i]	Subtitle / EQ		
	Pause	Pause / Step / Freeze		
	Zoom	Zoom / Size		
	(↔)	Sound / Title		





 

 

 














Original		Replacement		Original		Replacement	
	Power		Power				
	Up		Up				
	Menu		Menu / Home				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				
	Back		Back / Return				
	↑		CH+ / Page+				
	↓		CH- / Page-				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec/Top Menu		D.Menu / Top				
	Rec/Top Menu		Rec / Rec Mode				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				





	Original	Replacement	Original	Replacement
	Power			
	Up			
	Down			
	<<			
	Play			
	>>			
	Rec			
	Stop			
	Pause	