



























 

 
 
 

 

 

 



















 







 









 







Original	Replacement	Original	Replacement
	Power		Power
	[X]		Exit / Cancel / Clear
	[♦]		Zoom / Size
	[+]		Stop / Hold
	[?]/[:≡]		Play / Slow
	I.S.		Smart / List
	[i+]		Info / Angle
	Sleep		Sleep / Timer
	[<>]		Setup / OPT /
	Smart ♪		Sound / Title
	Radio		TV/Radio /
	Smart [ ]		Picture / Format
	Menu		Menu / Home
	Up		Up
	[≡]		Text / Goto
	OK		OK
	Left		Left
	Right		Right
	Vol+		Vol+
	Down		Down
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



 

 



 



 





 



Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	Source		AV / Input / RDS				
	0		0				
	I-II		Audio / Lang I/II				





Original	Replacement
 Power	 Power
 Prog	 TV/Radio /
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Down	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 1	 1
 2	 2

Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0

