



 

 



 





 

 




 








 





Original	Replacement
	 Power
	 Shift + 2
	 Shift + 3
	 TV/Radio /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Guide / EPG / -/--
	 Setup / OPT /
	 Shift + Setup / OPT / Tools
	 Up
	 Down
	 Right
	 Left
	 OK

Original	Replacement
	 Back / Return
	 Fav / Marker / PC
	 Info / Angle
	 << / Tune-
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 >>  / Preset+
	 Stop / Hold
	 Rec / Rec Mode
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Picture / Format





Original		Replacement		Original		Replacement	
	Net TV	+	Shift + 1				
	Teletext		Text / Goto				
	Disc Menu		D.Menu / Top				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Subtitle		Subtitle / EQ				
	Source		AV / Input / RDS				
	Ambilight		Smart / List				

