 









| Original | Replacement | Original | Replacement |
|--------------|---|----------------|--|
| Power |  | Power | EQ SUBTITLE |
| OK |  | Subtitle | Subtitle / EQ |
| Up |  | Settings | Setup / OPT / |
| Down |  | >> | PRESET+ >>I / Preset+ |
| Right |  | >> | TUNE+ >> / Tune+ |
| Left |  | Play | SLOW Play / Slow |
| Back |  | AD / PIP | TITLE SOUND |
| Vol + |  | << | PRESET- I<< / Preset- |
| Vol - |  | << | TUNE- << / Tune- |
| Home / Smart |  | Rec | REC MODE Rec / Rec Mode |
| 3D |  +  | Pause | STEP - FREEZE Pause / Step / Freeze |
| Mute |  | Text | GOTO TEXT Text / Goto |
| P + |  | FAV | PC FAV MARKER Fav / Marker / PC |
| P - |  | Exit | CLEAR EXIT Exit / Cancel / Clear |
| Ratio |  | Input | RDS AV INPUT AV / Input / RDS |
| List |  | Blue | Prime Video RANDOM Blue / Prime Video / Random |
| Q.Menu |  | Yellow | YouTube REPEAT A-B Yellow / YouTube / Repeat |
| | | Stop / Live TV | HOLD Stop / Hold |



| Original | Replacement | Original | Replacement |
|------------|---|---------------|---|
| AV Mode |  +  Shift + AV / Input / RDS | 5 |  5 |
| Green |  Green / APP / Repeat | Q.View |  +  Shift + Display / Media |
| Red |  Red / Netflix / Search | 4 |  4 |
| 0 |  0 | Live Zoom |  Zoom / Size |
| AD |  Audio / Lang I/II | 3 |  3 |
| TV / PC |  +  Shift + Fav / Marker / PC | 2 |  2 |
| Search |  +  Shift + Red / Netflix / | 1 |  1 |
| App |  +  Shift + Green / APP / | T.Opt |  +  Shift + Setup / OPT / Tools |
| TV / Radio |  TV/Radio / | Energy Saving |  Eject / Surround |
| Guide |  Guide / EPG / -/-- | My APPS |  +  Shift + Smart / List |
| Info |  Info / Angle | | |
| Recent |  Sleep / Timer | | |
| 9 |  9 | | |
| 8 |  8 | | |
| 7 |  7 | | |
| Live Menu |  Display / Media | | |
| 6 |  6 | | |

