

 



 
 
 


 
 

 
 
 
 


 
 


 



 
 


 
 

 


 
 
 









 
 



 
 















Original		Replacement		Original		Replacement	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Display		Info
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		Ok		Ok
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Mute		Mute
	Fav		Pre Ch		Epg		Guide
	Recall		Back		Media		Media
	P.Mode		Format		Ch+		Ch +
	S.Mode		Shift + Dual		Ch-		Ch -
	Sleep		Sleep		Rec		Rec



