



Original		Replacement		Original		Replacement	
	Power		Power		P+		CH+ / Page+
	Source		AV / Input / RDS		Vol-		Vol-
	1		1		P-		CH- / Page-
	2		2		Mute		Mute / Dimmer
	3		3		[G]		Menu / Home
	4		4		Up		Up
	5		5		i		Info / Angle
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Back		Back / Return
	Lang		Audio / Lang I/II		Down		Down
	0		0		Exit		Exit / Cancel / Clear
	TXT		Text / Goto		<<		<< / Tune-
	Home		Smart / List		Pause		Pause / Step / Freeze
	Home		D.Menu / Top		>>		>> / Tune+
	Vol+		Vol+		Rec		Rec / Rec Mode





Original	Replacement	Original	Replacement
	Play		Play / Slow
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement

