 




 


 
 


 
 




 






 


 







 

 

 
 
 

 

 

 
 




Original	Replacement	Original	Replacement
	Power		Mute
	1		Mute
	2		TV
	3		TV/R
	4		Back
	5		Back
	6		Menu
	7		Menu
	8		Up
	9		Up
	0		Down
	AV		Down
	-/--		Right
	P +		Right
	P -		Left
	V +		Left
	V -		Ok
			I-II
			Dual
			Text
			Text
			i
			Info
			Play / Pause
			Play
			Play / Pause
			Pause
			Stop
			Stop
			Rec
			Rec
			Red
			Red





Original	Replacement	Original	Replacement

