

 


 

 


 



 






 



 
 


 

 

 
 







 


 




 
 
 



 


 

 




 

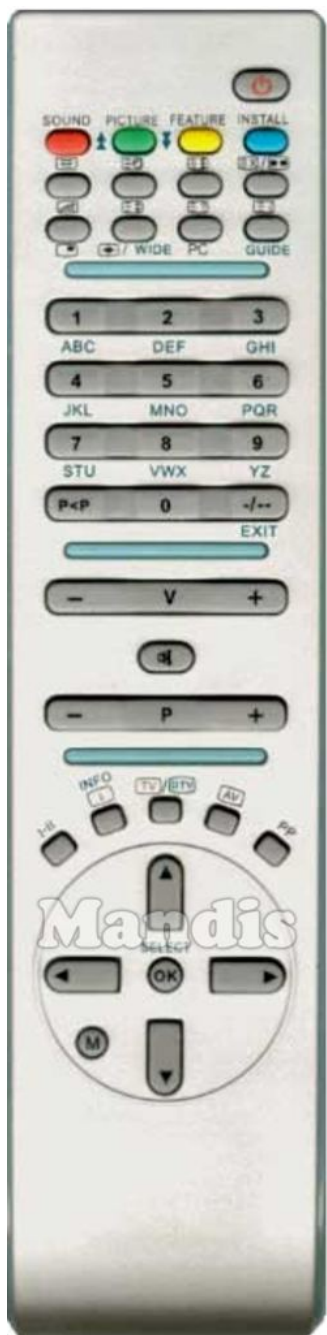 




Original		Replacement		Original		Replacement	
	Power		Power		5		5
	Red/Sound ↑		Red		6		6
	Green/Picture/↓		Green		7		7
	Yellow/Feature		Yellow		8		8
	Blue/Install		Blue		9		9
	[≡]		Text		0		0
	[≡0]		Options		P<P		Pre Ch
	[≡+]		Subt		-/--		Shift + Guide
	[≡x]/[· ·]		Format		Vol+		Vol +
	[/≡]/[*]		Back		Vol-		Vol -
	[+](≡♦)/Wide		3D		Mute		Mute
	[≡?]/PC		Smart		P+		Ch +
	[≡i]/Guide		Guide		P-		Ch -
	1		1		I-II		Dual
	2		2		[i]/Info		Info
	3		3		TV/DTV		TV/R
	4		4		AV		AV





	Original	Replacement	Original	Replacement
	PP	 Media		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		
	OK/Select	 Ok		
	M	 Menu		

