

 


 

 


 



 






 



 
 


 

 

 
 







 


 




 
 
 



 


 

 




 














 




| Original | Replacement | Original | Replacement |
|---|--|--|--|
|  Power |  Power |  5 |  5 |
|  Red/Sound ↑ |  Red |  6 |  6 |
|  Green/Picture/↓ |  Green |  7 |  7 |
|  Yellow/Feature |  Yellow |  8 |  8 |
|  Blue/Install |  Blue |  9 |  9 |
|  [=] |  REPEAT TEXT |  0 |  0 |
|  [=0] |  SETTINGS OPT |  P<P |  FAV PRE-CH |
|  [=+] |  AD SUBT |  -/-- |  SHIFT + -/-- |
|  [=x]/[· ·] |  PICTURE FORMAT |  Vol+ |  + VOL |
|  [/]/[*] |  RETURN BACK |  Vol- |  VOL - |
|  [=+](=[◆])/Wide |  ECO 3D |  Mute |  MUTE |
|  [=?]/PC |  HOME SMART |  P+ |  + CH |
|  [=i]/Guide |  -/-- GUIDE |  P- |  CH - |
|  1 |  1 |  I-II |  SOUND DUAL |
|  2 |  2 |  [i]/Info |  DISPLAY INFO |
|  3 |  3 |  TV/DTV |  SEARCH TV/R |
|  4 |  4 |  AV |  TIMER AV |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-------------|
|  | PP |  | Media |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK/Select |  | Ok |
|  | M |  | Menu |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

