
























 



 





 

 
 

 

 
 





 

 





 
 

 
 

 



 


Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 (i)	 Display Info
 AV	 Timer AV
 Red	 A
 Green	 B
 Yellow	 C

Original	Replacement
 Blue	 Blue
 TV	 TV/R
 Menu	 Menu
 [≡]/Top Menu	 Text
 Back	 Back
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 ↑/[+]	 Pre Ch
 F.T/L	 Options
 [?]	 3D







	Original	Replacement	Original	Replacement
	[◆]	 Format		
	↓/[]	 Guide		
	>	 D. Menu		
	[X]	 Exit		
	[≡i]	 Media		
	Zoom	 Eject		
	(↔)	 Smart		
	[]/♪	 Dual		
	[++]	 Subt		



 



 





	Original	Replacement	Original	Replacement
	Power			
	(i)			
	Menu			
	Up			
	Down			
	Right			
	Left			
	OK			
	Top Menu	 + 		
	Back			
	↑/[+]			
	↓/[-]			
	<<			
	Play			
	>>			
	Stop			
	Pause			





Original	Replacement
 Power	 Power
 (i)	 Info
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Top Menu	 Shift + Menu
 Back	 Back
 ↓/[]	 Guide
 ↑/[+]	 Pre Ch
 <<	 <<
 Play	 Play

Original	Replacement
 >>	 >>
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause





Original	Replacement
Mute	MUTE
(i)	DISPLAY INFO
MENU	TOP MENU MENU
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Top Menu	SHIFT + TOP MENU MENU
Back	RETURN BACK
↑/[+]	FAV PRE-CH
↓/[]	GUIDE
<<	<<
Play	PLAY MODE
>>	>>
Pause	Pause

Original	Replacement
	Stop
(↔)	APP MEDIA

