


 



















 











 

 




 


 





 

 

 

 


 
 

 








Original		Replacement		Original		Replacement	
	Power		Power		Goto		Guide
	Eject		Eject		Zoom		Shift + Eject
	N / P		Media		Menu		Menu
	Video		Format		PBC		Smart
	Intro		Red		Setup		Options
	Default		Green		OSD		Info
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		Enter		Ok
	6		6		Title		Blue
	7		7		L / R		TV/R
	8		8		Prog		Sleep
	9		9		Clear		Exit
	0		0		Mark		D. Menu
	10+		Pre Ch		<<		<<



