





 



 



 

 

 


 
 

 
 
 



 


 
 
 

 




 
 
 

 
 

 
 
 
 

 

 

 


 






 
 
 

 
 


 
 
 
 
 
 




Original		Replacement		Original		Replacement	
	Pause		Pause		0		0
	Power		Power		10+		Guide
	Mute		Mute		RDS/Goto/Pre-V		Pre Ch
	Eject		Eject		<</Pg-/Search-		<<
	Source		AV		>>/Pg+/Search		>>
	USB		Smart		I<</CH-/Radio-		Ch -
	Video		Media		>>I/CH+/Radio		Ch +
	Default		3D		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		Menu/AM/FM		Menu





Original		Replacement		Original	Replacement
	Setup/Exit/Auto		Exit		
	Title/Memory/EPG		Format		
	OSD/MO/ST/Info		Info		
	Zoom/Tv/Radio		TV/R		
	Angle/TTX		Text		
	Audio		Dual		
	Sub-T		Subt		
	Green/Prog		Green		
	Blue/A-B		Blue		
	Red/Mark		Red		
	Yellow/Repeat		Yellow		
	On/Off LCD		Sleep		
	EQ Sound		Back		
	Setup LCD		Options		
	DSP Sound		List		

