


 









 


 



 



 










 







 



 







 



 


 



 




 
 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up/PR+	 Up
 1	 1	 Down/PR-	 Down
 2	 2	 OK/List	 Ok
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 ↑	 Ch +
 8	 8	 ↓	 Ch -
 9	 9	 Pause	 Pause
 0	 0	 [+]	 3D
 Tv/Radio	 TV/R	 FAV	 Pre Ch
 ←PR	 Back	 UHF	 Smart
 EPG	 Guide	 PAL/NTSC	 Format
 Menu	 Menu	 TV/AV	 AV
 Info	 Info	 Red	 Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Audio	 Dual		
 TXT	 Text		
 [...]	 Subt		
 Audio L/R	 +  Shift + Dual		

Original	Replacement

