 





 


 
 


 
 


 


 
 



 






 

 
 
 
 








 
 
 




 

 










Original		Replacement		Original		Replacement	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Eco		3D
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Mute		Mute
	Game		4		Info		Info
	AUX1		5		Option		Options
	Media Player		6		Back		Back
	TV Audio		7		Setup		Menu
	AUX2		8		Up		Up
	Tuner		9		Down		Down
	iPod/USB		Guide		Right		Right
	CD		0		Left		Left
	Bluetooth		Pre Ch		Enter		Ok
	Online Music		Smart		I<</Tune-		I<<
	Internet Radio		Media		Play		Play
	CH/Page+		Ch +		Pause		Pause


 





 

 




 




 
 





Original	Replacement	Original	Replacement
>> /Tune+	>>		
Smart Select 1	+ Shift + 1		
Smart Select 2	+ Shift + 2		
Smart Select 3	+ Shift + 3		
Smart Select 4	+ Shift + 4		
Green/Movie	Green		
Red/Music	Red		
Blue/Game	Blue		
Yellow/Pure	Yellow		

 




Original	Replacement	Original	Replacement
 Power	 Power	 CH/Page-	 Ch -
 Sleep	 Sleep	 Vol+	 Vol +
 CBL/SAT	 1	 Vol-	 Vol -
 DVD	 2	 Mute	 Mute
 Blu-ray	 3	 Back	 Back
 Game	 4	 Up	 Up
 AUX1	 5	 Down	 Down
 Media Player	 6	 Right	 Right
 TV Audio	 7	 Left	 Left
 AUX2	 8	 Enter	 Ok
 Tuner	 9	 I<</Tune-	 I<<
 iPod/USB	 Guide	 >>I/Tune+	 >>I
 CD	 0	 Play	 Play
 Bluetooth	 Pre Ch	 Pause	 Pause
 Online Music	 Smart	 Smart Select 1	 Shift + 1
 Internet Radio	 Media	 Smart Select 2	 Shift + 2
 CH/Page+	 Ch +	 Smart Select 3	 Shift + 3





Original	Replacement	Original	Replacement
	 +  Shift + 4		

