




 

 



 



 

 

 
 
 

 
 





 







Original	Replacement
	
Power	Power
	
Source	AV
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
TXT/MIX/Text	Text
	
PRE-CH	Pre Ch
	
Vol+	Vol +
	
Vol-	Vol -
	
Mute	Mute

Original	Replacement
	
P+	Ch +
	
P-	Ch -
	
CH List	List
	
Menu	Menu
	
Smart Hub	Smart
	
Guide	Guide
	
Tools	Options
	
Info	Info
	
Back/Return	Back
	
Exit	Exit
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
Ok	Ok
	
Red	Red
	
Green	Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Rec		Rec				
	E-Manual		D. Menu				
	D		Media				
	Stop		Stop				
	<</ <<		<<				
	Play		Play				
	Pause		Pause				
	>>/>>		>>				

