 

 



 




 
 
 
 
 
 


 
 

 
 
 

 
 


 
 







 
 
 

 

 
 
 
 
 
 

 

 
 

 














Original		Replacement		Original		Replacement	
	Power		Power		P+		Ch +
	Source		AV		P-		Ch -
	1		1		i		Info
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	TV		TV/R		World		Media
	Recall		Pre Ch		Music/Camera/Ph		Smart
	Vol+		Vol +		Guide		Guide
	Vol-		Vol -		*/O		Format
	Mute		Mute		*/Q		3D





Original	Replacement	Original	Replacement
 [=]/Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang	 Dual		
 [=]..	 Subt		
 -[O]-	 Options		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

