










 



 



 



 




 






 



 



 
 


 
 



 


 

 



 





 




Original	Replacement	Original	Replacement
 POWER	 Power	 VOL+	 Vol +
 Open / Close	 Eject	 VOL-	 Vol -
 MUTE	 Mute	 SETUP	 Options
 DVD / TV Sys	 Smart	 PAUSE / Step	 Pause
 VIDEO	 Media	 Menu/Return	 Menu
 TUNER	 Shift + Media	 Menu / Return	 Back
 I<<	 I<<	 GOTO / Auto	 Guide
 <<	 <<	 PROGRESSIVE	 AV
 >>	 >>	 1	 1
 >>	 >>	 2	 2
 Up	 Up	 3	 3
 Down	 Down	 4	 4
 Right	 Right	 5	 5
 Left	 Left	 6	 6
 Enter	 Ok	 7	 7
 Play	 Play	 8	 8
 STOP	 Stop	 9	 9





Original		Replacement		Original		Replacement	
	0		0				
	CH-LEVEL		TV/R				
	Display / FM Mode		Info				
	REPEAT		Text				
	A-B	+	Shift + Play				
	RANDOM / RDS		List				
	SLOW		Ch -				
	SURR. MODE		3D				
	EQ		Dual				
	Zoom	+	Shift + Eject				
	SLEEP		Sleep				
	Title / PBC		D. Menu				
	SUB TITLE/MPX		Subt				
	AUDIO / PTY	+	Shift + Dual				
	ANGLE		Format				

