

 
 










 

 

 
 
 

 
 

 








 


 
 

 
 

 
 













 



 
 
 

 

 
 




 


 
 




	Original	Replacement		Original	Replacement
	Power		Power		Tracking/V-Lock+
	ShowView		Smart		Tracking/V-Lock-
	Rec Check		3D		Vol+
	Ext Link		Text		Vol-
	Rec		Rec		I<< Index
	1		1		Index >>I
	2		2		<<
	3		3		>>
	4		4		Stop
	5		5		Pause/Step
	6		6		Play
	7		7		Prog Play
	8		8		Menu
	9		9		Display
	0		0		Exit
	-/--		Guide		Up
	AV/Input Select		AV		Down





Original		Replacement		Original		Replacement	
	Right		Right				
	Left		Left				
	Enter		Ok				
	Prog/Check		Sleep				
	Timer		Shift + AV				
	Output		TV/R				
	AV Link		Media				
	Audio		Dual				
	Tv Aspect/Off		Format				
	Music w/Picture		List				
	A/Cancel Reset		Red				
	B/I-Timer		Green				
	C/SP/LP/EP		Yellow				
	D/VPS/PDC		Blue				





Original	Replacement
Power	Power
Rec Check	3D
Ext Link	Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10	Guide
AV/Input Select	AV
Tracking/V-Lock/C Ch +	Ch +
Tracking/V-Lock/C Ch -	Ch -

Original	Replacement
Vol+	Vol +
Vol-	Vol -
I<< Skip	I<<
Skip >>I	I>>
<< Slow/Search	<<
Slow/Search >>	I>>
Stop	Stop
Pause/Step	Pause
Play	Play
Top Menu/Direct Navigator	Menu
Play List	List
Display	Info
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left




 





 
 



 
 
 
 
 

 

 
 
 













Original		Replacement		Original	Replacement
	Enter		Ok		
	Timer	+	Shift + AV		
	Quick Replay		D. Menu		
	Output		TV/R		
	Subtitle		Subt		
	Audio		Dual		
	Angle/Page		Smart		
	Music w/Picture		Pre Ch		
	Play Mode	+	Shift + Play		
	Zoom		Eject		
	Repeat		Text		
	Position		Options		
	A/Cancel Reset		Red		
	B/Cinema		Green		
	C/Group		Yellow		
	D/Setup		Blue		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 AV/Input Select	 AV
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Tv Aspect	 Format
 A	 Red
 B	 Green
 C	 Yellow
 D	 Blue

